

Zip Screen motor

Adjustment instructions lower end position for ZIVO and Perfect ZIP

Meastria WT

The UPPER END LINE is AUTOMATICALLY adjusted to torque; the adjustment of the LOWER END LINE must be done MANUALLY.

Setting the lower end position:

1. Press the WT button (UP and DOWN buttons simultaneously) on your Somfy setting device until the blind confirms with a short up/down movement.
2. Press the UP button until the curtain confirms with a short up/down movement.
3. Move the blind to the desired lower end position.
If necessary, adjust the position of the curtain with the UP or DOWN button.
4. Press the UP button briefly and then immediately press the UP button a second time. UP button a second time until the curtain confirms with a short up/down movement.
5. press the WT button (UP and DOWN buttons simultaneously), until the curtain confirms with a short up/down movement to confirm the setting.

